



FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION

ASSEMBLY INSTRUCTIONS

Kitchen Pantry Cabinets

(This assembly instruction sheet applies for all our Pantry Cabinets)

***PLEASE HAVE A RELIABLE PERSON TO ASSIST YOU DURING PANTRY ASSEMBLY**

❖ **General Instruction**

- Read the instruction carefully before starting the installation.
- Follow all generally accepted safety procedures during assembly.

❖ **Parts List:** The following items are included in the carton.

ITEM	DESCRIPTION	Qty
A	Face Frame w/ Door	2 Door for 18"W Pantry / 4 Door for 24"W/30"W Pantry
B	Side Panel (Right & Left)	2
C	Top Panel	1
D	Bottom Panel	1
E	Shelf	4 (2 for Top / 2 for Bottom)
F	Back Panel	1
G	Toe Kick	1
H	Roll Out Tray*	3 Only Applies for BN/BE/MC*

96" TALL PANTRY CABINETS for AWK, MM, and COG

ITEM	DESCRIPTION	Qty
A	Face Frame w/ Door	2 Door for 18"W Pantry / 4 Door for 24"W/30"W Pantry
B	Side Panel (Right & Left)	2 Side Panel for Upper Cabinet / 2 Side Panel for Bottom
C	Top Panel	1 Panel for Upper Cabinet / 1 Panel for Bottom Cabinet
D	Bottom Panel	1 Panel for Upper Cabinet / 1 Panel for Bottom Cabinet
E	Shelf	2 Shelves for Upper Cabinet / 2 Shelves for Bottom Cabinet
F	Back Panel	1 Panel for Upper Cabinet / 1Panel for Bottom Cabinet
G	Toe Kick	1

NOTE: FACE FRAME & DOOR for BCF and BCR are in separate carton.








FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION

❖ Instruction

- **STEP 1:** Put the Face Frame (A) down on a soft flat working surface and insert two (B) side panels into the grooves of Face Frame (A). Align the metal clip lock connector and lock it with a screwdriver by turning the screw 180 degrees.
- **STEP 2:** Spread the Side Panels (B) gently and insert Top Panel (C) and Bottom Panel (D) into the grooves of Face Frame until it touches the Face Frame (A). Confirm that all is flush and lock connectors as STEP1. Insert the shelf clips into the holes in the cabinet Side Panels (B) at the desired height and slide in the Shelf (E) as shown picture.
- **STEP 3:** Install the Back Panel (F) on top of the unit with finished side facing inside. Align the Back Panel (F) and enforce it with screw into the pre-drilled holes in the Back Panel (F).
- **STEP 4:** Install the Toe Kick (G) on the Side Panels (B) at the front of the cabinet. Confirm that all is flush and lock as STEP1
- **STEP 5:** **TWO PERSON** place the unit in an upright position while holding Back Panel (F) in place. Open Pantry Cabinet DOOR(s) one at a time all assembly connectors in the back.
- **STEP 6:** The Pantry Cabinet is now complete. To install the Pantry Cabinet(s), confirm the condition of the wall (e.g., drywall, concrete, tiles) for proper method of the cabinet installation.

Example: To install the cabinet(s) on the drywall, run a stud finder along the drywall

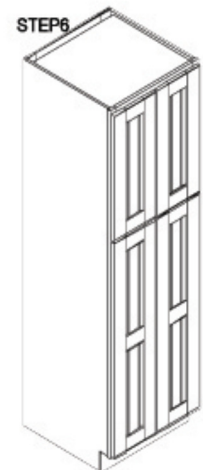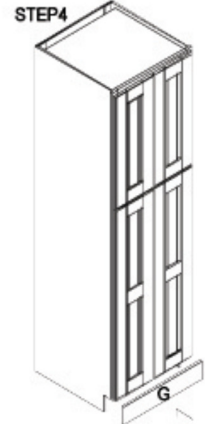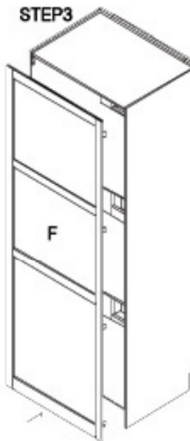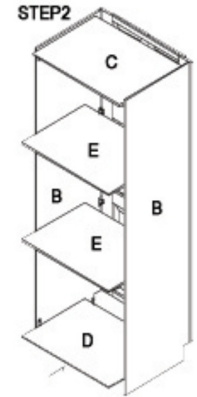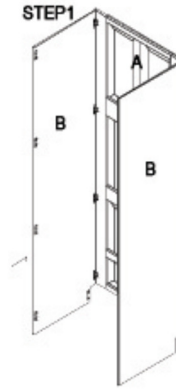



FU XIANG CABINETS WAREHOUSE

KITCHEN • BATH • ORGANIZATION

❖ Special Instruction for 96" TALL PANTRY CABINETS for AWK, MM, and COG

AWK-PC1896/AWK- PC2496/AWK-3096

MM-PC1896/MM-PC2496/MM-PC3096

COG-PC1896/COG-PC2496/MM-PC3096

➤ **UPPER Pantry Cabinet**

- **STEP 1:** Put the Face Frame (A) down on a soft flat working surface and insert two (B) side panels into the grooves of Face Frame (A). Align the metal clip lock connector and lock it with a screwdriver by turning the screw 180 degrees.
- **STEP 2:** Spread the Side Panels (B) gently and insert Top Panel(C) and Bottom Panel (D) into the grooves of Face Frame until it touches the Face Frame (A). Confirm that all is flush and lock connectors as STEP1. Insert the shelf clips into the holes in the cabinet Side Panels (B) at the desired height and slide in the Shelf (E) as shown picture.
- **STEP 3:** Install the Back Panel (F) on top of the unit with finished side facing inside. Align the Back Panel (F) and enforce it with screw into the pre-drilled holes in the Back Panel (F).

➤ **BOTTOM Pantry Cabinet**

- **Repeat the above INSTRUCTION STEP 1, STEP2, and STEP3.**
- **STEP 4:** Install the Toe Kick (G) on the Side Panels (B) at the front of the cabinet. Confirm that all is flush and lock as STEP1
- **STEP 5:** **TWO PERSON** place the unit in an upright position while holding Back Panel (F) in place. Put UPPER Pantry Cabinet on top of the BOTTOM Pantry Cabinet. Confirm that all is flush and lock. Open Pantry Cabinet DOOR(s) one at a time all assembly connectors in the back. Cover the line of the Side Panel (B) with the Scribe Molding.
- **STEP 6:** The Pantry Cabinet is now complete. To install the Pantry Cabinet(s), confirm the condition of the wall (e.g., drywall, concrete, tiles) for proper method of the cabinet installation.

Example: To install the cabinet(s) on the drywall, run a stud finder along the drywall

